

LAT Thermal Control Software

Section 2.1.0 Common Parameters Block

<i>Parameter</i>	<i>Value</i>
RITFAIL	3
RESFAIL	3
RITESTTOL	3
RESESTTOL	5

Section 2.2.1 HP Configuration Table

<i>HP#</i>	<i>Active</i>	<i>Fail</i>	<i>RIT</i>	<i>RIT CNV</i>	<i>RIT FLTR</i>	<i>RES</i>	<i>RES CNV</i>	<i>RES FLTR</i>	<i>RES Lo</i>	<i>RES Hi</i>	<i>RIT Lo</i>
0	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
1	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
2	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
3	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
4	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
5	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
6	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
7	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
8	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
9	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
10	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0
11	YES	ON	XLHP	0	0	P	0	0	-65.0	-63.0	-6.0

